 



Installation Manual - 4000T


[100, 145, 150, 160, 196, 240, 250, 270]


Thermostatic Valve Trim & Handle Set

    
Use With TVH.4101, TVH.4420F, TVH.4301F Valves

 


 


 












[100.4000T]

[145.4000T]

[150.4000T]

[160.4000T]

[196.4000T]

[240.4000T]


[250.4000T]

[270.4000T]


BEFORE YOU BEGIN

- You must observe all local plumbing laws and codes.
- Do not install this valve if it does not meet local plumbing codes.
- Shut off the main water supply.




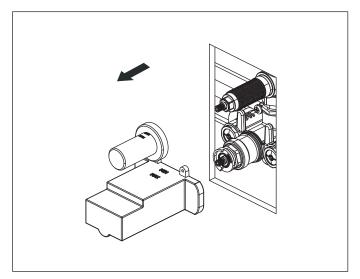


Remove mud guards

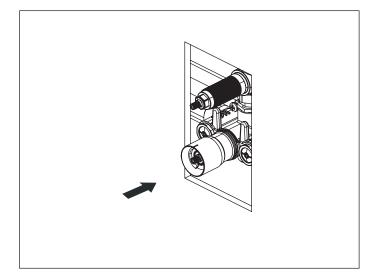

A hard push may be required

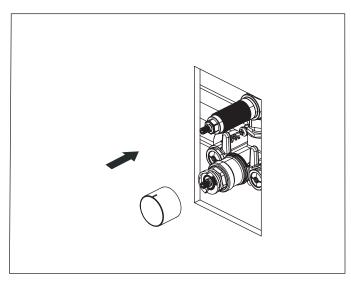


Install 42mm ring

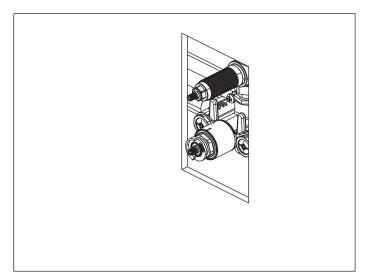


The 42mm ring must be fully flush to ensure the handle fits correctly.



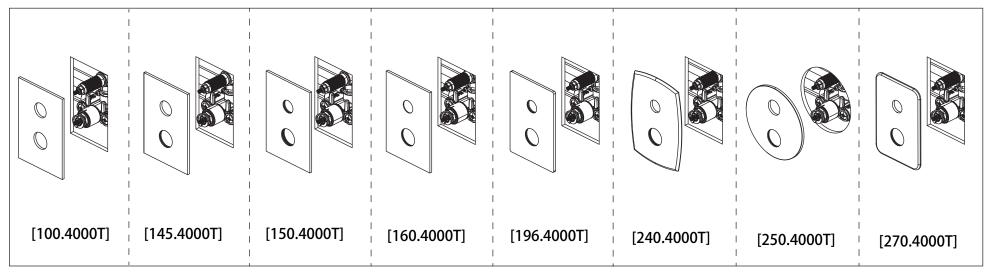


Insert trim plate

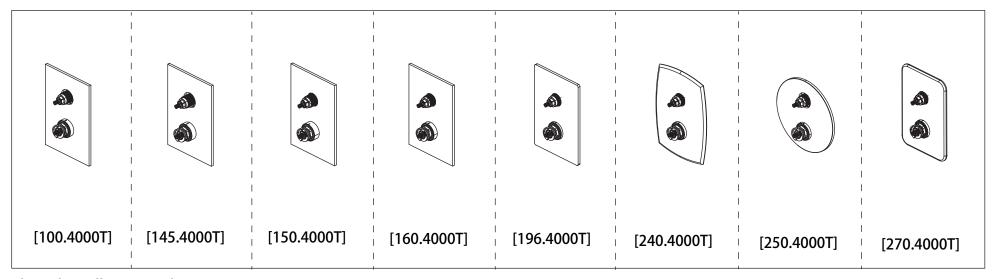


Align plate till it is straight



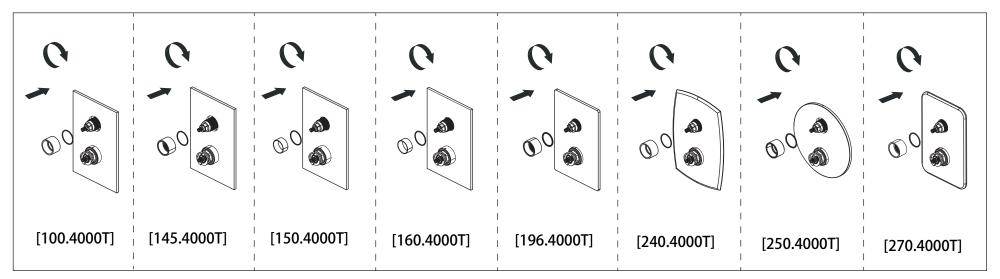


Insert adapter base and tighten

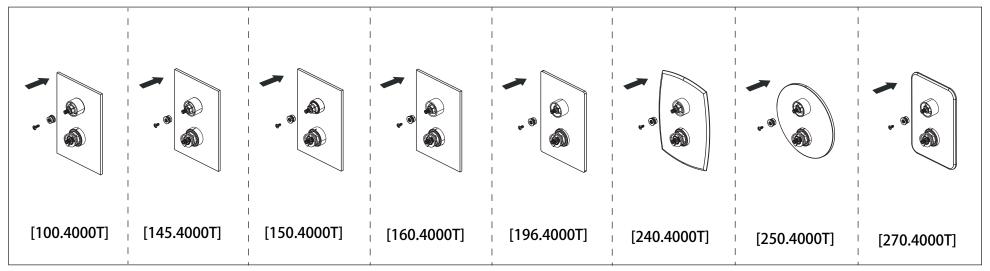


Insert centring knob & screws.



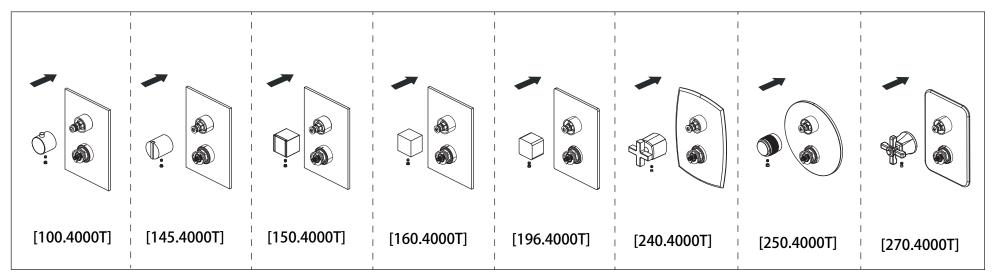


Attach the volume handle, secure it by tightening the hex screw, and insert the cover button.

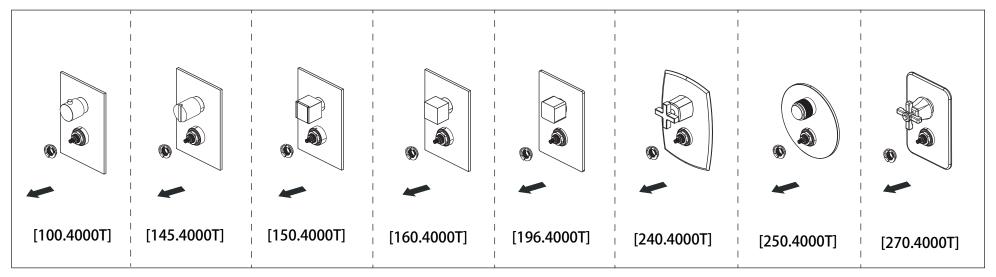


Remove the anti-scald temperature ring, adjust it to the correct position, and reinsert it as shown in the reference image.



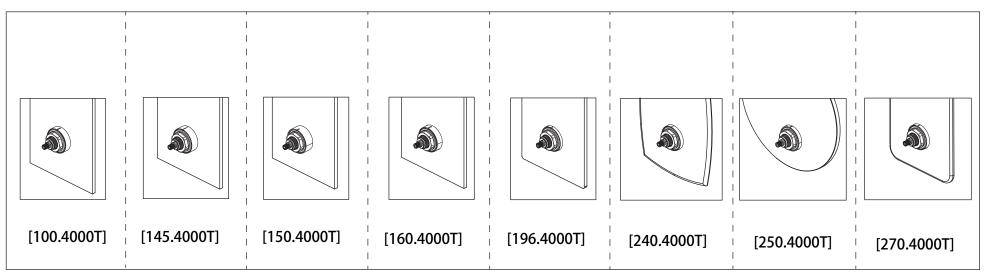


Calibrate the cartridge before attaching the temperature handle, ensuring the red marks are aligned.

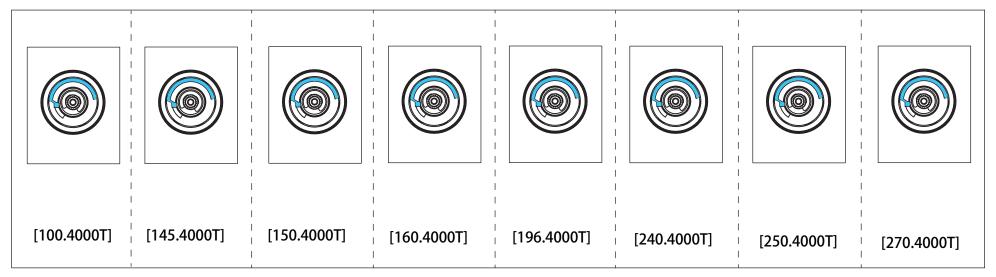


Reinsert the anti-scald temperature ring properly in the correct position.



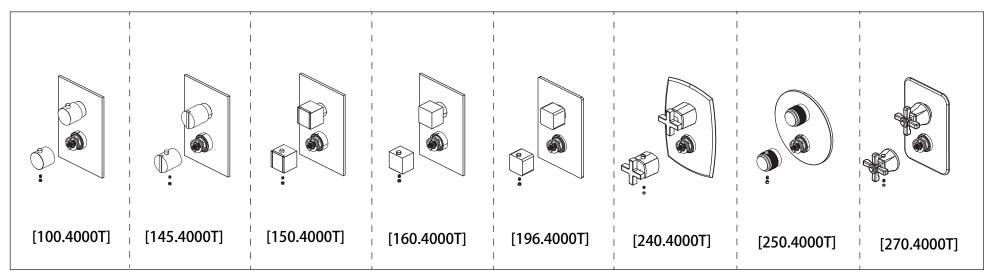

Attach the temperature handle, secure it by tightening the hex screw, and insert the cover button.

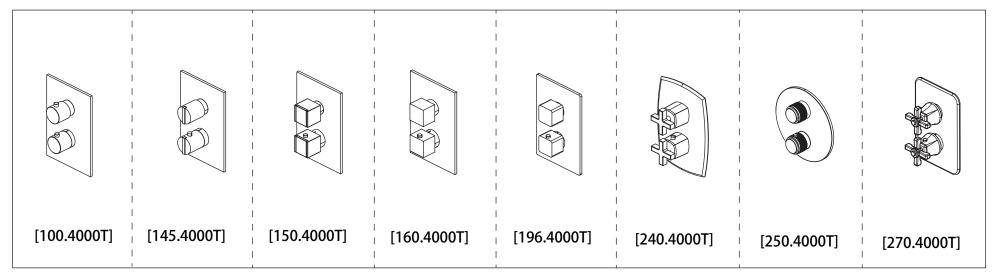

This image illustrates the trim fully installed.