


Installation Manual For CFB.2150

Cascade Flow In-Built Shower Head / Tub Filler

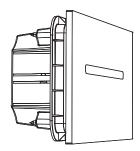

NOTICE TO HOMEOWNER

- We recommend that this product is installed by a qualified professional plumber.
- Please check this product immediately to ensure that it has not been damaged and is complete. Before installation, please make sure this product is the correct model and you have all the parts required for installation and use.
- Please flush the water system to ensure that no metal swarf, solder, and other impurities can enter the product.
- Turn off water supply before commencing work.
- Please read these instructions carefully and retain for future reference.

BEFORE YOU BEGIN

- You must observe all local plumbing laws and codes.
- Do not install this valve if it does not meet local plumbing codes.
- Shut off the main water supply.

Ver. 2.53




Installation Manual For CFB.2150

Cascade Flow In-Built Shower Head / Tub Filler

TABLE OF CONTENTS			
• In The Box			1
• Operating Specifications			2
• Flow Rate Graph			2
• Technical Drawing / Rough In Spec .			3
• Water Projection Graph - Shower head			4
• Water Projection Graph - Tub Filler			5
Installation Procedure			7



IN THE BOX

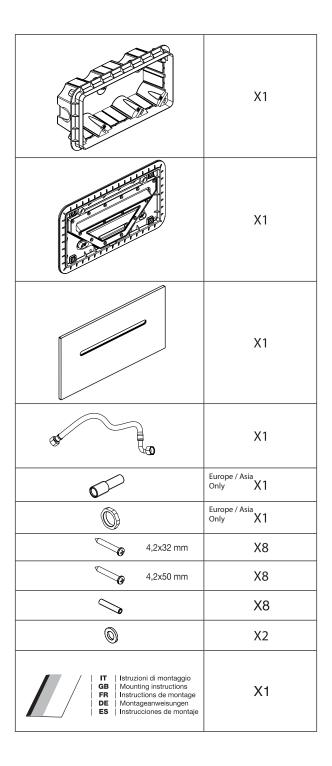



OPERATING SPECIFICATIONS

WATER TEMPERATURE

1 2

This product is to be used with water at a temperature range of 40°F - 120°F ONLY!

WATER PRESSURE




This product is to be used with a water pressure range of 15 PSI to 72 PSI ONLY

If water pressure is greater than 72 PSI install a pressure reducing valve (PRV)


This valve meets or exceeds ANSI A112.18.1 and ASSE 1016

FLOW RATE GRAPH - Without 2.0 GPM Flow Restrictor

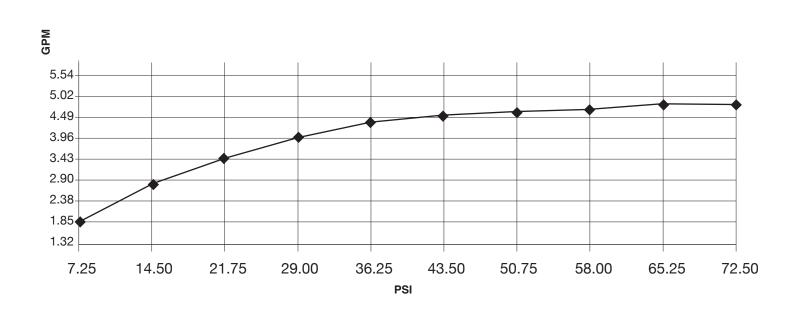





TECHNICAL DRAWING / ROUGH IN SPEC

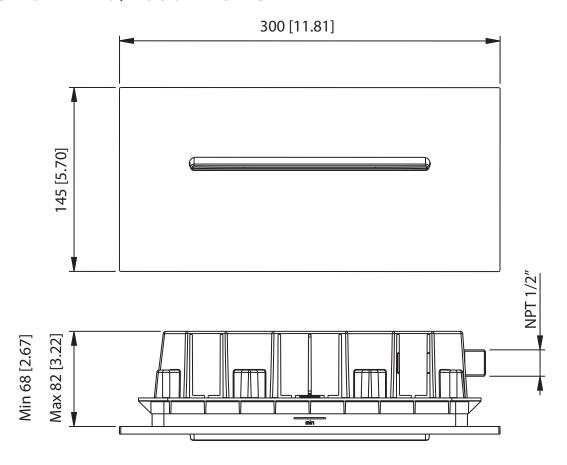

Valve Box should be within 7mm [0.275"] of finished wall

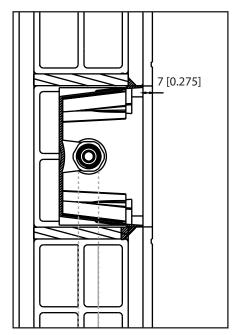

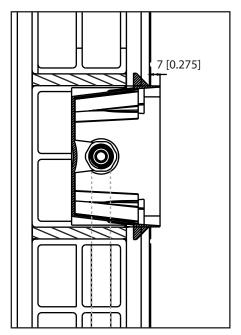



INSTALLATION PROCEDURE

