

Installation Manual

250.1170


Floor Mounted Tub Filler With Hand Shower

NOTICE TO HOMEOWNER

- We recommend that this product is installed by a qualified professional plumber.
- Please check this product immediately to ensure that it has not been damaged and is complete. Before installation, please make sure this product is the correct model and you have all the parts required for installation and use.
- Please flush the water system to ensure that no metal swarf, solder, and other impurities can enter the product.
- Turn off water supply before commencing work.
- Please read these instructions carefully and retain for future reference.

BEFORE YOU BEGIN

- You must observe all local plumbing laws and codes.
- Do not install this valve if it does not meet local plumbing codes.
- Shut off the main water supply.

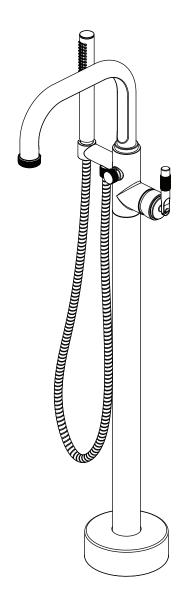



Installation Manual

250.1170

Floor Mounted Tub Filler With Hand Shower



OPERATING SPECIFICATIONS

WATER TEMPERATURE

This product is to be used with water at a temperature range of 40°F - 120°F ONLY!

WATER PRESSURE



This product is to be used with a water pressure range of 15 PSI to 80 PSI ONLY

If water pressure is greater than 80 PSI install a pressure reducing valve (PRV)

This valve meets or exceeds ANSI A112.18.1 and ASSE 1016

CAUTION:


- During mounting of this product extra care should be taken while drilling into the floor to avoid damaging any water supply hoses or copper lines that may exist beneath.


- To avoid risk of injury do NOT use the tub filler as a support bar to enter or exit the bath. The tub filler is not designed to support weight


-Supply hose connections should be installed in a location where they are accessible for cleaning and service.



INSTALLATION PROCEDURE

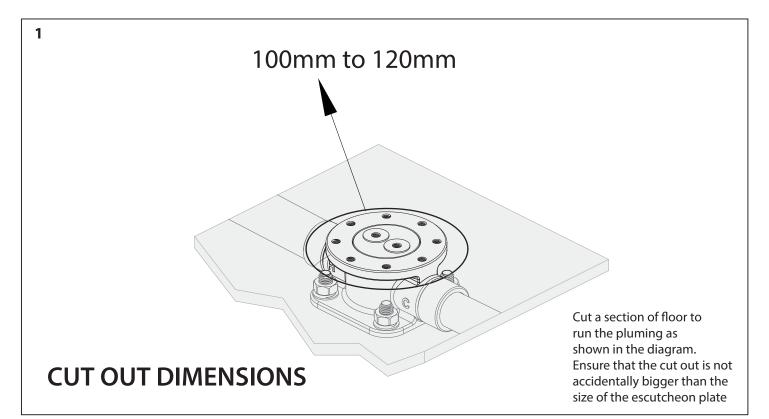


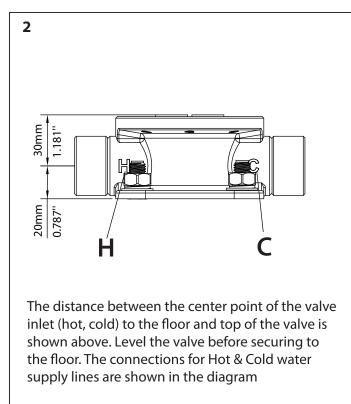


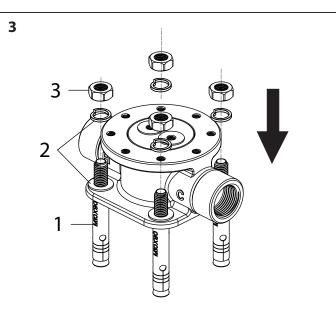

Mark holes for floor bolt installation. Install valve using bolts (1). Secure head bolts with washers (2) and nuts (3). Ensure valve is perfectly level.

INSTALLATION PROCEDURE

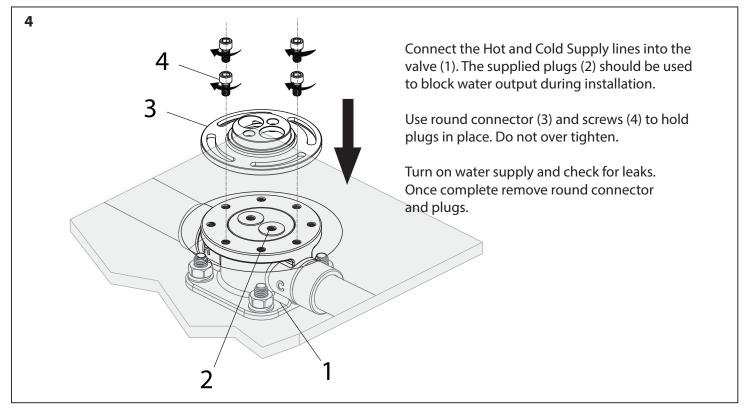

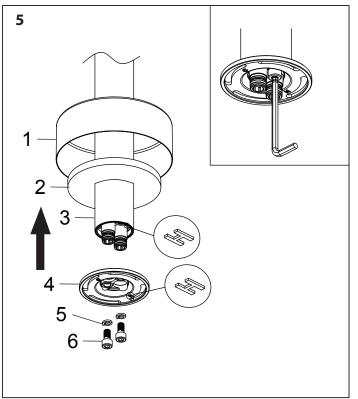



Before installing the trim ensure double o-rings are undamaged and greased. Please the round cover (1) and washer (2) over the stand pipe (3). Install the round connector (4) to the faucet body using the washer (5) and screws (6) with Allen wrench provided. Do not over tighten.

Note: the "H" end of the connector (4) corresponds to the "H" end of the trim. Do not loose metal washer (5)



INSTALLATION PROCEDURE

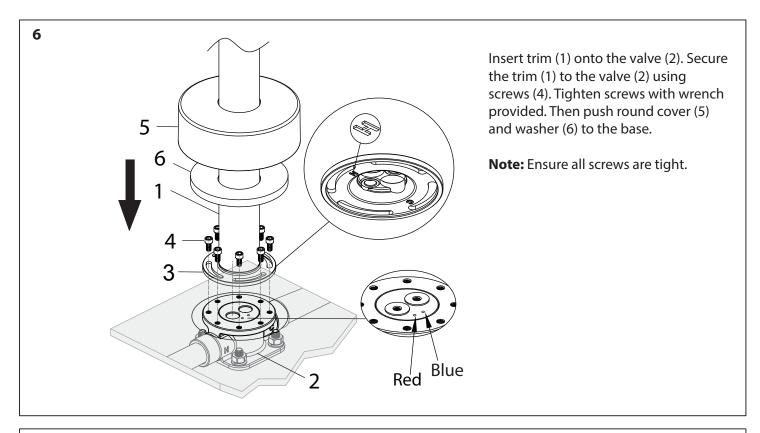

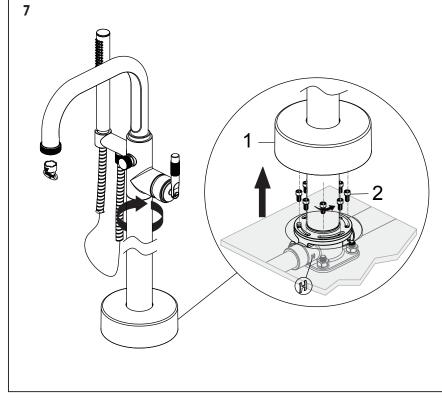



360° Rotation

The trim piece can be rotated 360 degrees. If after installation the trim orientation is not what you want, it can be changed by rotating the trim. It is necessary to remove the round cover (1) and loosen the crews (2) before turning the trim.



PROPER OPERATION

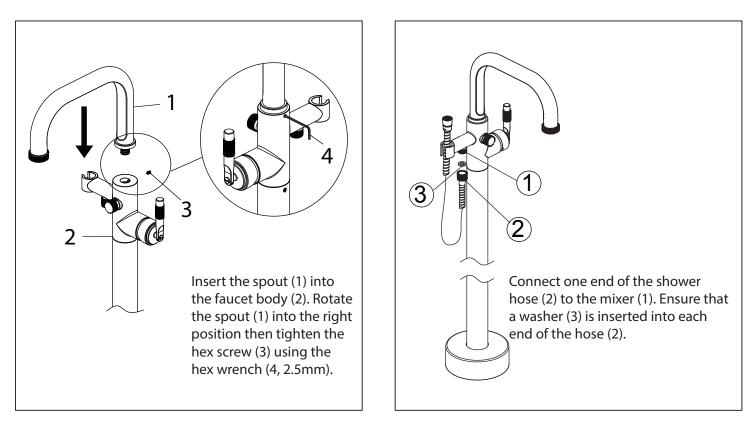

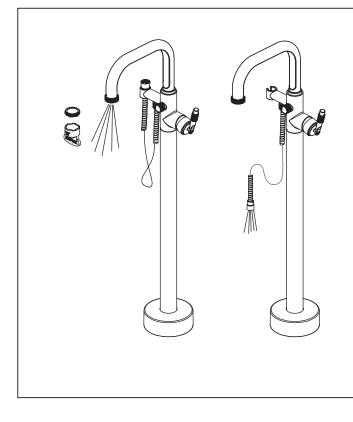

After Installationis complete remove the aerator with the provided aerator key and flush the water lines. Turn on the hot and cold supply lines and allow water to flow for approximately 1 minute. After flushing re-insert the aerator.



